## **Convertible Top**

The construction of the weather-proof convertible top enables you to open and close the top with ease.

A brief operational procedure can be found on back of the sun visor on the driver's side.

#### WARNING

When the windstop is installed, the rear seats may not be occupied during operating the convertible top and while it remains open – DANGER OF INJURY.

When opening or closing the top, make absolutely sure that you, your passengers or bystanders have removed hands, fingers, hair, etc., from between the linkage or top and the windshield frame – DANGER OF INJURY.

### Note:

When opening and closing the convertible top, ensure free running room for the top, top linkages, windstop and operating gear. Be certain that all packages or parcels stored in the rear seat area are clear of the moving components of the convertible top.

There should be no objects in the storage area for the convertible top behind the rear seat backrests.

When opening and closing the convertible top, the backrests of the front seats must not be within the swinging radius of the windstop.

The convertible top must not be operated unless the vehicle is at a stand still.

To prevent damage to the convertible top material from mold and/or chaffing, the top material should be clean and dry prior to opening.

The convertible top should not be opened at temperatures below freezing point, as this may cause the rear window to break.


Avoid opening or closing top when vehicle is not on a level surface. Otherwise, damage to top mechanism could occur.

Do not operate the top if the vehicle is standing on the jack or on a floor jack. Lower vehicle before operating top.

To prevent scratches, it is advisable to wash the rear window with clear water before opening the top if it is dirty or dusty.

The vehicle may only be driven with the top in the full up or down position (indicator light off).


Do not leave the top open for a long period of time (several days). If possible, close the top overnight. This will ensure that the fabric and the rear window remain free of creases.

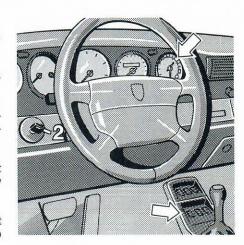

# Opening the top

The top can only be operated with the parking brake set.

- 1. Turn ignition key to ignition lock position 2 (engine running or not running).
- Operate rocker switch until indicator light goes out (end position). If while operating the top a hazardous situation develops, release the top operating switch. This will immediately interrupt the operation of the top.

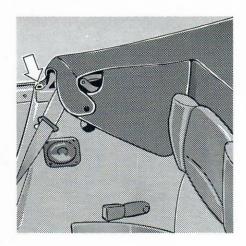

## Folding top boot

Do not drive the vehicle without the boot properly installed or damage may occur to the headliner.


 Remove covering boot from storage pocket in luggage compartment, slide over collapsed top and secure in place with the snap fasteners provided.

Remove the caps (arrow) of the snap fasteners.

The Tenax studs (4 on both left and right) must be pulled before buttoning takes place.

- The sides of the boot must be fastened to the interior by snap fasteners; the central part of the boot must be pushed in behind the rear seat backrest.
- When removing the folding top boot, first pull the Tenax studs, then undo them. Push the caps (arrow) of the snap fasteners in.

Return the covering boot to the storage pocket in the luggage compartment.

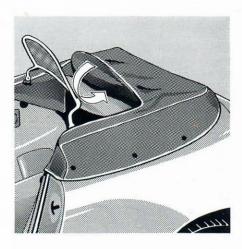

N N

If the windstop is in position, the central part of the cover must be folded back under the cover.