


Central electric (main fuse and relay panel)

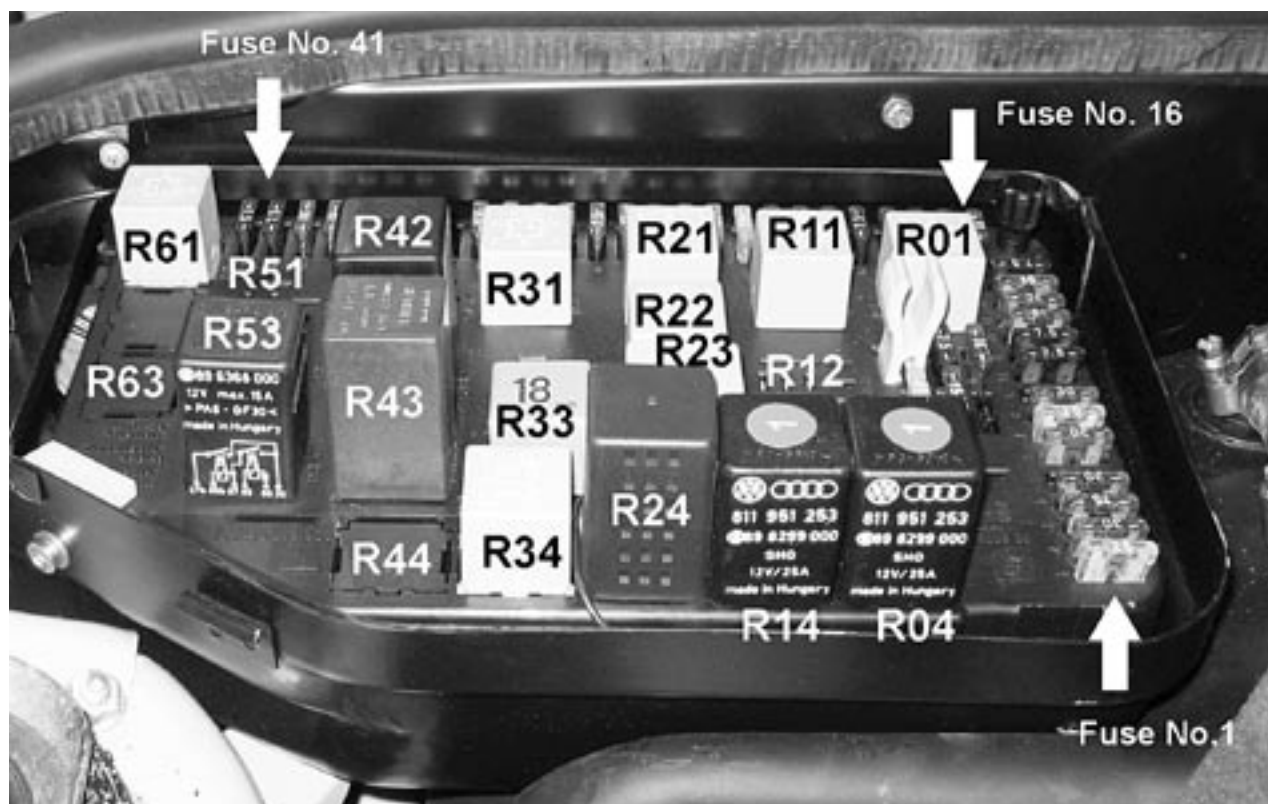

- | | | |
|--|---|---|
| 1 25A LH & RH front blower fans. | 23 15A Low beam right. | R13 Not used. |
| 2 30A Oil cooler blower fan. | 24 25A Windshield wipers/washer, headlight washer. | R14 Oil cooler blower fan. |
| 3 15A Dual (two tone) horn. | 25 25A Seat heater and cigar lighter (RHD). | R21 Powered roof system installed. |
| 4 30A Power windows, outside mirror heating. | 26 25A Fuel pump, O2 sensor. | R22 Power windows. |
| 5 Not used. | 27 15A Tiptronic control unit. | R23 Two tone horn. |
| 6 30A Right power seat. | 28 15A Mobile phone, rear window defogger (demister), outside mirror adjustment, rear window wiper. | R24 Control unit Park/Neutral lock (Tiptronic only). |
| 7 25A Cigar lighter (LHD). | 29 Not used. | R24 Control unit lights (manual 1996). |
| 8 30A Left power seat. | 30 7.5A Turn signals left rear, left side. | R31 Front fog lights standard. |
| 9 Not used. | 31 7.5A Turn signal left front. | R32 Daytime running lights (1996). |
| 10 7.5A Cordless phone (1996). | 32 7.5A Turn signal right front. | R33 Terminal X. |
| 11 7.5A Interior lights. | 33 7.5A Turn signal right rear, right side. | R34 Front fog lights M193/M533 only. |
| 12 15A OBC, rear window wiper, warning flashers, clock | 34 Not used. | R41 Not used. |
| 13 30A Sunroof, Cabriolet roof, Targa glass roof (1) and sunblind motor. | 35 30A Targa Glass roof (2) (1996). | R42 Wiper intermittent control. |
| 14 15A Fog lights, reverse (back-up) lights. | 36 7.5A Licence plate lights. | R43 Headlight washing. |
| 15 7.5A Back up light Tiptronic. | 37 15A Rear spoiler. | R44 Catalytic converter control (Japan only). |
| 16 15A ABS. | 38 15A Radio, amplifier or booster. | R51 Tiptronic backup light. |
| 17 7.5A Heater, rear spoiler. | 39 30A Condenser blower fan. | R52 Not used, pins bridged for Mobile. |
| 18 7.5A Instruments, Diagnostic connector, Central informer, Catalytic converter control (Japan only). | 40 7.5A Left side marker light. | R53 DME and fuel pump relay. |
| 19 15A Stop lights, cruise control, Park & Neutral lock. | 41 7.5A Right side marker light. | R61 Start relay (Terminal 61) Fitted with options M249, M529 & M530 only. |
| 20 7.5 A High beam left. | | R63 Day time running lights (Canada only). |
| 21 7.5 A High beam right. | | |
| 22 15A Low beam left. | | |
- Relays:**
- | |
|------------------------------------|
| R01 Manual backup/rear fog lights. |
| R03 not used. |
| R04 Oil cooler blower fan. |
| R11 Terminal 15E. |
| R12 Bridge adapter. |
- Notes:**
Fuses 10 and 35 not used 94 & 95. Fuse 35 only for Targa.
Relay R32 not used for model years 1994 and 1995.