


'77-'79 PORSCHE 928

Fuses : Location, Rating, Function & Input Bus

© Alan C Moore 2014

Ceramic Fuse

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|----------------------|----------------------------------|-------------------------------|-----------------------------------|---------------------------|------------|---------|------------------------|------------------------------|--------------------------------|-------------------------------|----------|----------------|---------------------------------|--------------------------|-------------------------------|-------------------------------|---------------------|-------------------|---------------|-------------------------------|--------------------------------|--------------------------|---------------------------|-------------------------|--------------------------|------------------------------|-------------------------------|------------------------|-----------------------|-------------------------|------------------------|--------------------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 |
| Front Fog Lights (Left & Right) | Aux. Highbeams (ROW) | License Plate & Underhood Lights | Console & Power Outlet Lights | Power (Cigar) Outlet, Instruments | Wipers, Intensive Washers | Rear Wiper | Sunroof | Backup Lights, Mirrors | Brake Lights, Cruise Control | Instruments, Pod lights, Clock | Instruments & Indicator lamps | Not Used | Electric Seats | Horns, Rear Wiper Park, Antenna | AC Condenser Cooling Fan | HVAC Blower, Compressor Cutch | Rear Defogger, Mirror Heaters | Headlight Pod Motor | Headlight Washers | Power Windows | Fuel Pump, Aux Air Valve, WUR | Interior Light & Hatch Release | Headlights Highbeam Left | Headlights Highbeam Right | Headlights Lowbeam Left | Headlights Lowbeam Right | Marker (Parking) Lights Left | Marker (Parking) Lights Right | Turn Signal Front Left | Turn Signal Rear Left | Turn Signal Front Right | Turn Signal Rear Right | Rear Foglight (ROW only) |
| 16 | 16 | 8 | 8 | 16 | 16 | 8 | 16 | 8 | 8 | 8 | 8 | - | 25 | 16 | 25 | 25 | 25 | 25 | 16 | 25 | 25 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 |
| | | | | | X | | | 15 | | | | | | | 30 | | | | | | | | | | | | | | | | | | |
| Input Bus: 30= Batt+, 15= Ignition, X= Accessory | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Fuse # | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Rating (A) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Fuse Function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Fuse Output | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

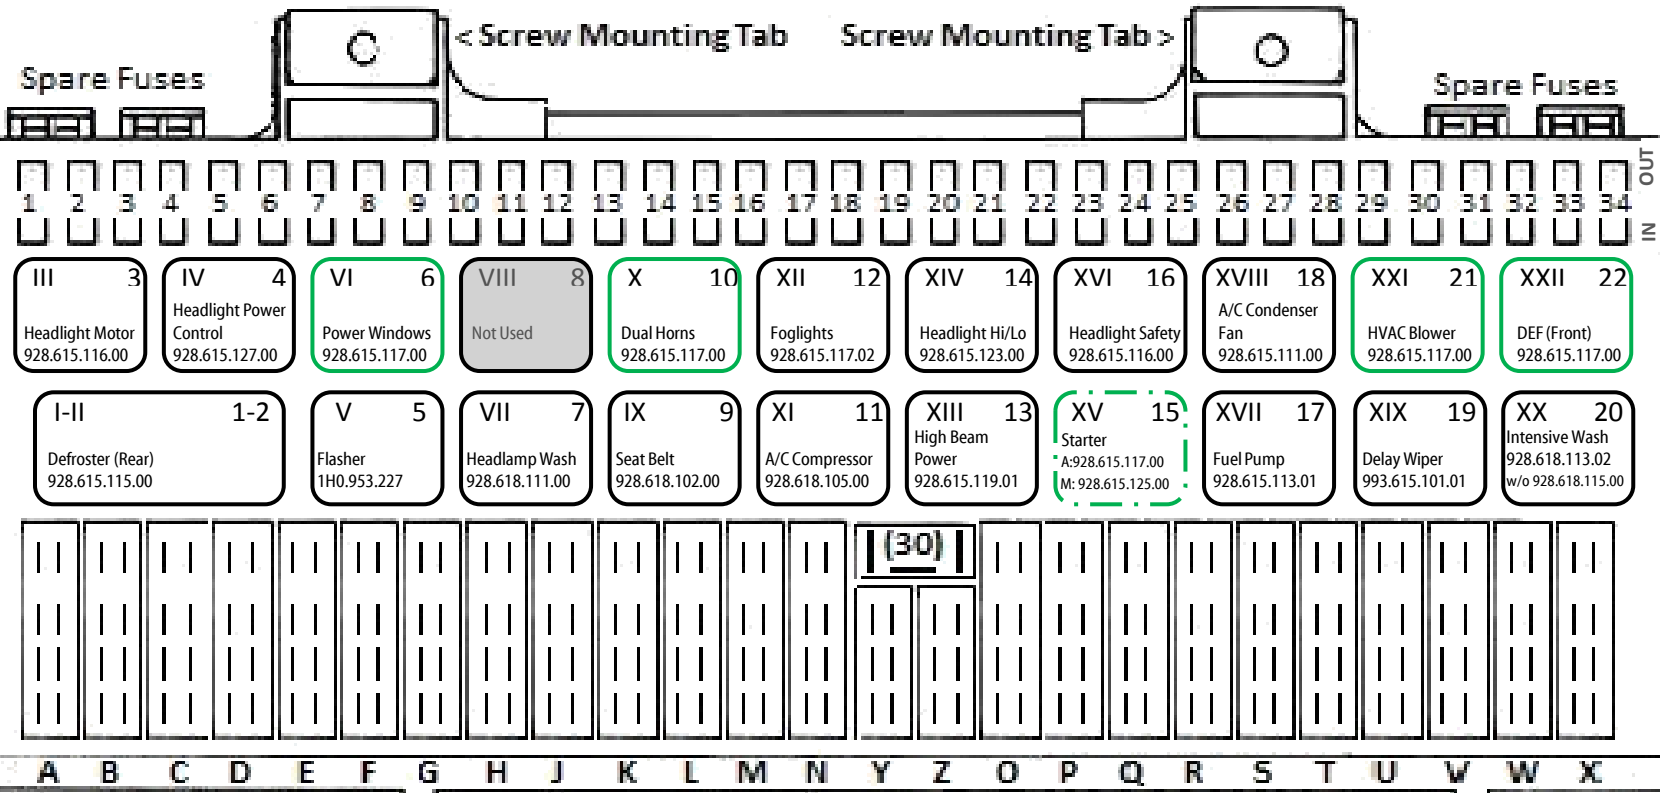

These relays are all interchangeable